

Interconnector – P6L ECO MUX

1501006

Main					IC02A 10w GY	Engine				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Gas Pressure Switch	8007	4W BR	3	8055	1	8055	B23	90W BK	1320	Gas Pressure Switch
Fan Relay	RB003	10W WI	2A	1523	2	1523	A9	90W BK	1320	Fan Relay Low Speed
Fan Relay	RB003	10W WI	2B	1525	3	1525	A10	90W BK	1320	Fan Relay High Speed
Gas Pressure Switch	8007	4W BR	2	807	4	807	B87	90W BK	1320	Gas Pressure Switch
Gas Pressure Switch	8007	4W BR	1							
Gas Pressure Switch	8007	4W BR	4							
OBD Connector Power	C001	16W BK	1		5	C142	B29	90W BK	1320	V IGN
Immobilizer Power	8208	8W BK	4							
ICN	IC20A	9W BR	2B							
F34	BF00D	8W BK	E3							
Alternator	FCM	15W WI	9A	1070	6	1070	1	2W BK	1020A	Alternator
Compressor Clutch Command	FCM	15W BK	3B	8079	7	8079	1	2W YL	8020	Compressor Clutch Command
F33	BF00D	8W BK	E4	1086	8	1086	1	1W	1010A	Starter
Not Used					9					Not Used
Not Used					10					Not Used
Main					IC02A 16w GY	Engine				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Not Used					1					Not Used
Gas Pressure Switch	8007	4W BR	3	8055	2	8055	B23	90W BK	1320	Gas Pressure Switch
Fuel Guage	4310	6W BK	6	430	3	430	B46	90W BK	1320	Fuel Guage
Fuel Guage	4310	6W BK	5	431	4	431	B82	90W BK	1320	Fuel Guage
Fuel Pump	4310	6W BK	3	121	5	121A	B3	10W BK	RLYb	Fuel Pump Relay
Fan Relay	RB003	10W BK	2A	1523	6	1523	A9	90W BK	1320	Fan Relay Low Speed
Fan Relay	RB003	10W BK	2B	1525	7	1525	A10	90W BK	1320	Fan Relay High Speed
Fan	1510	3W BK	1							
Fan Resistor	1506	3W BK	1	1510	8	1510	A45	90W BK	1320	Cooling Fan Diagnosis Signal Input
Fan Relay	RB003	10W BK	5B							
Diagnostic Connector CAN L	C001	16W BK	14							
ABS CAN L	7020	38W BK	14		9	9019C	B57	90W BK	1320	ECU CAN L
Immobilizer CAN L	8208	8W BK	6							
CAN L	IC23C	16W BK	14							
Diagnostic Connector CAN H	C001	16W BK	6							
ABS CAN H	7020	38W BK	26		10	9020C	B88	90W BK	1320	ECU CAN H
Immobilizer CAN H	8208	8W BK	5							
CAN H	IC23C	16W BK	15							
Gas Pressure Switch	8007	4W BR	2	807	11	807	B87	90W BK	1320	Gas Pressure Switch
Gas Pressure Switch	8007	4W BR	1							
Gas Pressure Switch	8007	4W BR	4							
OBD Connector Power	C001	16W BK	1		12	C142	B29	90W BK	1320	V IGN (After Switch)
Immobilizer Power	8208	8W BK	4							
ICN Power	IC20A	9W BR	2B							
F34	BF00D	8W BK	E3							
OBD Connector	C001	16W BK	7	1411A	13	1411	B56	90W BK	1320	OBD Connector
Oil Pressure Sensor	FCM	15W BK	7A	410	14	410	2	2W GY	4110	Engine Oil Pressure Sensor
Reverse Gear Switch	FCM	15W BK	6A	220	15	220	2	2W GY	2200	Reverse Gear Switch
Alternator	FCM	15W WI	9A	1070	16	1070	1	2W BK	1020A	Alternator

Drawn by: Engineering Dep. of ISACO

2014/10/11

Interconnector – P6L ECO MUX

1501006

Main					IC02B 10w BK	Engine				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Fuel Guage	4310	6W BK	6	430	1	430	B46	90W BK	1320	Fuel Guage
Fuel Guage	4310	6W BK	5	431	2	431	B82	90W BK	1320	Fuel Guage
Fuel Pump	4310	6W BK	3	121	3	121A	B3	10W BK	RLYb	Fuel Pump Relay
Fan	1510	3W BK	1							
Fan Resistor	1506	3W BK	1	1510	4	1510	A45	90W BK	1320	FAN
Fan Relay	RB003	10W BK	5B							
Diagnostic Connector CAN L	C001	16W BK	14							
ABS CAN L	7020	38W BK	14		5	9019C	B57	90W BK	1320	ECU CAN L
Immobilizer CAN L	8208	8W BK	6							
CAN L	IC23C	16W BK	14							
Diagnostic Connector CAN H	C001	16W BK	6							
ABS CAN H	7020	38W BK	26		6	9020C	B88	90W BK	1320	ECU CAN H
Immobilizer CAN H	8208	8W BK	5							
CAN H	IC23C	16W BK	15							
OBD Connector	C001	16W BK	7	1411A	7	1411	B56	90W BK	1320	OBD Connector
Oil Pressure Sensor	FCM	15W BK	7A	410	8	410	2	2W GY	4110	Engine Oil Pressure Sensor
Reverse Gear Switch	FCM	15W BK	6A	220	9	220	2	2W GY	2200	Reverse Gear Switch
					10					

Main					IC02B 6w BK	Engine				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Compressor Clutch Command	FCM	15W BK	3B	8079	1	8079	1	2W YL	8020	Compressor Clutch Command
Not Used					2					Not Used
F33	BF00D	8W BK	E4	1086	3	1086	1	1W	1010A	Starter
Not Used					4					Not Used
Not Used					5					Not Used
Not Used					6					Not Used

Main					IC23B 6w BK	Interior				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Bonnet Switch	8611	2W BK	1	8601	1	8601	6	40W BK	BCM	Bonnet Switch Statues
Rar Wash Pump Relay (-)	FCM	15W WI	A4	521	2	521A	A2	10W GY	RB00A	Rar Wash Pump Relay (-)
Horn Relay (RLY2)	RB001	10W GY	A2	253	3	253	24	40W BK	BCM	Horn Command
OBD Connector For Radio Code	C001	16W BK	11	9008	4	9008	15	16W BK	8410E	Radio
Front Wash Pump	5115	2W GN	2	513	5	E513(SD)	7	14W BK	IC72	RLH Door Lock Assembly Ground
							EC23			
							2	4W GN	3010	Roof Lamp Gruond
							4	40W BK	BCM	Ground
							10	16W BK	IC70	FLH Door Ground
							B1	15W WI	BCM	Ground
							1	2W WI	4730	Seat Belt Switch Gruond
							2	2W BR	4400	Hand Brake Switch Gruond
							A2	10W WI	RB00B	Heater Relay Gruond
							523(HB)	A3	10W GY	RB00A
Wiper Relay (Relay RLY4)	RB002	10W BK	A1							
Wiper Relay (Relay RLY4)	RB002	10W BK	A5	B102A	6	B091	A5	10W GY	RB00D	Rear Waiper Relay (HB)
Wiper Relay (Relay RLY3)	RB002	10W BK	B1							
F12	BF003	8W BK	E1							

Interconnector – P6L ECO MUX

1501006

Engine					IC22A 6w BK	Injector				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Engine ECU (-)	1320	90W BK	B59	1321	1	1321	1	2W BK	1331	Injector 1 (ECU Earth)
Engine ECU (-)	1320	90W BK	B89	1322	2	1322	1	2W BK	1332	Injector 2 (ECU Earth)
Oxygen Sensor	1350B	4W BK	3	1200	3	1320	2	2W BK	1331	Injector 1 (+)
Ignition Coil	1135	6W BK	2				2	2W BK	1332	Injector 2 (+)
Canister Discharge Electrovalve	1215	2W BR	2				2	2W BK	1333	Injector 3 (+)
Main Relay	RLYb	10W BK	A5				2	2W BK	1334	Injector 4 (+)
Engine ECU (+)	1320	90W BK	A66							
Not Used					4					Not Used
Engine ECU (-)	1320	90W BK	B90	1323	5	1323	1	2W BK	1333	Injector 3 (ECU Earth)
Engine ECU (-)	1320	90W BK	B60	1324	6	1324	1	2W BK	1334	Injector 4 (ECU Earth)

Main					IC20A 9w BR	Dashboard				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Not Used					1A					Not Used
Not Used					2A					Not Used
Not Used					4A					Not Used
Not Used					5A					Not Used
Interior Fuse Box (F36)	BFOOD	8W BK	E1	BB4C	1B	BB4C	1	18W WI	ICN	ICN power
Diagnostic Connector Power	C001	16W BK	16				B111	1	18W WI	7215
Interior Relays	IC23C	16W BK	9	A038	2B	A038	9	18W WI	ICN	ICN (Ignition)
Immobilizer Power	8208	8W BK	1							
Gas Pressure Switch Power (Ignition)	8007	4W BR	1							
Gas Pressure Switch Power (Ignition)	8007	4W BR	4							
Diagnostic Connector (Ignition)	C001	16W BK	1							
Immobilizer (Ignition)	8208	8W BK	4							
ICN (Ignition)	IC02A	16W GY	12							
ICN (Ignition)	IC02A	10W GY	5							
Pressostat/ECU(Ignition) (F34)	BFOOD	8W BK	E3							
Immobilizer Power (Ignition)	8208	8W BK	3							
Not Used					4B					Not Used
Not Used					5B					Not Used

Interconnector - P6L ECO MUX

1501006

Main					IC23C 16w BK	Interior							
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function			
Interior Fuse Box (F9 or f10)	BF003	8W BK	E4	B09	1	B12	S1	8W BK	BF00C	F31			
							S2	8W BK	BF00C	F32			
Head Lamp Height Adjuster	6600	6W BK	4	V09	2	V091	1	2W YL	3053	Cigar Lighter Lamp			
							4	9W YL	6120	Isolator Switch Backlight			
							3	16W BK	IC82	Plate Number Lamps (HB)			
							A7	15W WI	BCM	Side Lamp			
							5	12W WI	8410B	Radio Backlight			
RH Front Side Lamp	2625	2W BR	1	V09	2	V091	1	3W BK	8100	Cigar Lighter			
							1	2W BK	2633	RH Plate Number Lamp (SD)			
							1	2W BK	2636	LH Plate Number Lamp (SD)			
							1	6W BK	2635	Rear RH Side Lamp			
							5	6W BK	2630	Rear LH Side Lamp			
LH Front Side Lamp	2620	2W BR	1	V09	2	V091	1	6W BK	2630	Rear LH Side Lamp			
FLH Repeater Flasher	2320	2W GY	2				2332	1	6W BK	2630	Rear LH Indicator		
LH Side Repeater Flasher	2340	2W BR	1				2333	3	2333B	A8	15W WI	BCM	LH Indicators
FRH Repeater Flasher	2325	2W GY	2				2342	4	2343B	6	6W BK	2635	Rear RH Indicator
RH Side Repeater Flasher	2345	2W BR	1				2343	4	2343B	A9	15W WI	BCM	RH Indicators
Stop Lamp Switch	2100	4W WI	1	211	5	A21	E1	8W BK	BF00A	Radio / ICN / BCM / FCM (F24)			
ACC	FCM	15W WI	6B	A22			A1	10W WI	RB00B	Heater Blower Relay			
CAN H	FCM	15W BK	2A	9022			1	16W BK	IC23A	ICN & MFD			
							4	8W BK	8410A	Radio			
							2	40W BK	BCM	ACC Power			
CAN L	FCM	15W BK	1A	9021	6	9022	10	16W BK	IC23A	CAN H			
					7	9032	20	20W WI	8410C	Radio CAN H (Crouse Radio)			
					7	9031	17	20W WI	8410C	Radio CAN L (Crouse Radio)			
					8	9021	7	16W BK	IC23A	CAN L			
Interior Fuse Box (F3)	BF001	8W BK	E2	B03	8	B2	S4	8W WI	BF00B	F25			
							S3	8W BK	BF00C	F30			
							S4	8W BK	BF00C	F29			
							B1	10W GY	RB00A	Front Wash Pump Relay			
							B5	10W GY	RB00A	Front Wash Pump Relay			
Interior Fuse Box (F36)	BF00D	8W BK	E1	B04E	9	B08B	A1	10W GY	RB00A	Rear Wash Pump Relay (HB)			
Diagnostic Connector Power Supply	C001	16W BK	16				A5	10W GY	RB00A	Rear Wash Pump Relay (HB)			
Immobilizer Power Supply	8208	8W BK	1				B1	10W WI	RB00B	Rear Screen Heater Relay			
ICN & MFD Power Supply	IC20A	9W BR	1B				2	2W GN	2110	Additional Stop Lamp (SD)			
Stop Switch	2100	4W WI	2				210	2	16W BK	IC82	Additional Stop Lamp (HB)		
Stop Switch (ABS Mobis)	7020	38W BK	30	2103	10	211	2	16W BK	IC82	Additional Stop Lamp (HB)			
Stop Switch (ABS Mando)	7020	38W BK	23	2103	10	2110	12	40W BK	BCM	Brake Pedal Switch			
Front Wash Pump Relay	FCM	15W WI	7A	511	11	511A	B2	10W GY	RB00A	Front Wash Pump Relay			
Front Wash Pump	5115	2W GN	1	512	12	513	B3	10W GY	RB00A	Front Wash Pump Relay			
Diagnostic Connector (Airbag)	C001	16W BK	13	6220	13	6220	9	50W BU/YL/BR	6570	Diagnostic Connector (Airbag)			
Diagnostic Connector CAN L	C001	16W BK	14	9019	14	9019	22	40W BK	BCM	CAN L			
ABS CAN L	7020	38W BK	14										
Immobilizer CAN L	8208	8W BK	6										
CAN L	IC02A	16W GY	9										
CAN L	IC02B	10W BK	5										
Diagnostic Connector CAN H	C001	16W BK	6	9020	15	9020	21	40W BK	BCM	CAN H			
ABS CAN H	7020	38W BK	26										
Immobilizer CAN H	8208	8W BK	5										
CAN H	IC02A	16W GY	10										
CAN H	IC02B	10W BK	6										
Interior Fuse Box (F4)	BF001	8W BK	E1	B04	16	B1	S1	8W WI	BF00B	F28			
				S2			8W WI	BF00B	F27				
				S3			8W WI	BF00B	F26				

Drawn by: Engineering Dep. of ISACO

2014/10/11

Interconnector - P6L ECO MUX

1501006

Dashboard					IC23A 16w BK	Interior					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
MFD Power	7215	18W WI	2	B155	1	B155	E1	8W BK	BF00A	F24	
							A1	10W WI	RB00B	Heater Blower Relay	
							5	16W BK	IC23C	ACC Power	
ICN Power	ICN	18W WI	14				12	8W BK	8410E	Radio ACC Power	
							2	40W BK	BCM	ACC Power	
Hazard Switch Command	2300	6W BK	6	230	2	230	15	40W BK	BCM	Hazard Switch Command	
Hazard Switch LED	2300	6W BK	4	230A	3	230B	18	40W BK	BCM	Hazard Switch LED	
Evaprator Sensor Information	7215	18W WI	8	8051	4	8051	1	6W BK	IC8060A	Evaprator Sensor Information	
Screen Heater Switch	8080	7W GY	7	8116	5	8116	29	40W BK	BCM	Screen Heater Switch	
Aircondition Switch	8080	7W GY	2	8054	6	8054	35	40W BK	BCM	Aircondition Switch	
CAN L	7215	18W WI	14	9051	7		9051	1	18W WI	BCM	CAN L
							9021	7	16W BK	IC23C	CAN L
Master Lock Switch	2300	6W BK	5	622	8	622	36	40W BK	BCM	Master Lock Switch	
Rear Screen Heater Switch	8080	7W GY	5	811	9	811A	1	16W BK	IC82	Rear Screen Heater HB	
							B5	10W WI	RB00B	Rear Screen Heater Relay	
							4	16W BK	IC71	FRH View Mirror Heater	
							1	1W BK	8120B	Rear Screen Heater (SD)	
							4	16W BK	IC70	FLH View Mirror Heater	
CAN H	7215	18W WI	10	9052	10		9052	2	18W WI	BCM	CAN H
							9022	6	16W BK	IC23C	CAN H
V ECO	8080	7W GY	1	B060	11	B060	4	6W BK	IC80	Only For With Rear Sensor	
							A5	15W WI	BCM	V ECO	
							3	4W GN	3010	V ECO For Roof Lamp	
							1	9W YL	6120	V ECO For Isolator Switch	
							1	2W WI	3105	V ECO Boot Lamp	
						A1	10W BK	RB00C	V ECO For Front Window lift Switch Relay		
Trip Mode(if exsist)	7215	18W WI	5	723	12	723	4B	11W GY	0005	Trip Mode(if exsist)	
Outside Temperature Sensor	7215	18W WI	9	720	13	720	6	16W BK	IC71	Outside Temperature Sensor	
Diplaying Airbag Status On ICN	ICN	18W WI	12	6560	14	6560	7	50W BU/YL/BR	6570	Diplaying Airbag Status On ICN	
Diplaying Airbag Status On ICN	ICN	18W WI	11	6561	15	6561	8	50W BU/YL/BR	6570	Diplaying Airbag Status On ICN	
Master Lock Switch LED	2300	6W BK	1	622A	16	622A	17	40W BK	BCM	Master Lock Switch LED	

Drawn by: Engineering Dep. of ISACO

2014/10/11

Interconnector – P6L ECO MUX

1501006

Interior					IC70 16w BK	Frant Door LH											
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function							
FLH Electric Window Motor	6036P	7W BK	A4	6021	1	6071	1	2W GY	6040	FLH Electric Window Motor							
Doors Unlock	BCM	15W WI	B2	6211	2	6211	5	6W BR	6202	FLH Door Lock Assembly							
FRH Door Lock Assembly	IC71	16W BK	2														
RLH Door Lock Assembly	IC72	14W BK	12														
RRH door Lock assembly	IC73	14W BK	12														
Boot Lock Motor (HB)	IC82	16W BK	6														
Boot Lock Motor (SD)	6260	2W WI	1														
FLH Door Lock (Switch)	BCM	40W BK	7	6207	3	6208	4	6W BR	6202	FLH Door Lock Assembly							
Rear Screen Heater (HB)	IC82	16W BK	1	813	4	813	2	10W BK	6410	FLH View Mirror Heater							
Rear Screen Heater Relay	R800B	10W WI	B5														
FRH View Mirror Heater	IC71	16W BK	4														
Rear Screen Heater (SD)	8120B	1W BK	1														
Rear Screen Heater Switch	IC23A	16W BK	9														
Radio (Crouse)	8410B	8W WI	6	8411	5	8431	2	2W BK	8420	FLH Door Speaker							
Radio (RDE)	8410A	8W BK	6	8411	6	720	3	10W BK	6410	FLH View Mirror							
Not Used					7	E720	4	10W BK	6410	FLH View Mirror							
FLH Window Winder Command	6036P	7W BK	B3	6011	8	6061	2	2W GR	6040	FLH Window Winder Motor							
Not Used					9					Not Used							
RLH Door Lock Assembly Ground	IC72	14W BK	7	EC20C	10	E22A	2	6W BR	6202	FLH Door Lock Assembly Ground							
Roof Lamp Ground	3010	4W GN	2														
BCM Ground	BCM	40W BK	4														
Heater Blower Relay Ground	R800B	10W WI	A2														
BCM Ground	BCM	15W WI	B1														
Seat Belt Switch Ground	4730	2W WI	1														
Hand Brake Switch Ground	4400	2W BR	2														
Front Wash Pump Ground (SD)	IC23B	6W BK	5														
Front Window Lift and Mirros Switch	6036C	18W BK	3								6401	11	6411	5	10W BK	6410	FLH View Mirror
Front Window Lift and Mirros Switch	6036C	18W BK	1								6402	12	6412	7	10W BK	6410	FLH View Mirror
Radio (Crouse)	8410B	8W WI	5	8410	13	8430	1	2W BK	8420	FLH Door Speaker							
Radio (RDE)	8410A	8W BK	5	8410	14	6217	1	6W BR	6202	FLH Door Lock Assembly(Switch)							
FLH Door Lock (Switch)	BCM	40W BK	9	6219	15	620	3	6W BR	6202	FLH Door Lock Assembly(Switch)							
Door Lock	BCM	15W WI	B3	6201	15	620	3	6W BR	6202	FLH Door Lock Assembly(Switch)							
FRH Door Lock Assembly	IC71	16W BK	15														
RLH Door Lock Assembly	IC72	14W BK	5														
RRH door lock Assembly	IC73	14W BK	5														
Boot Lock Motor Only For HB	IC82	16W BK	5														
Electrical Mirror Switch	6036C	18W BK	5	6400	16	6410	6	10W BK	6410	FLH View Mirror							

Drawn by: Engineering Dep. of ISACO

2014/10/11

Interconnector – P6L ECO MUX

1501006

Interior					IC71 16w BK	Frant Door RH				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
FRH Electric Window Motor	6036P	7W BK	B1	6071	1	6071	1	2W GY	6045	FRH Electric Window Motor
Doors Unlock	BCM	15W WI	B2	6212	2	6211	5	6W BR	6207	FRH Door Lock Assembly
FLH Door Lock Assembly	IC70	16W BK	2							
RLH Door Lock Assembly	IC72	14W BK	12							
RRH door Lock assembly	IC73	14W BK	12							
Boot Lock Motor (HB)	IC82	16W BK	6							
Boot Lock Motor (SD)	6260	2W WI	1	6208	3	6208	4	6W BR	6207	FRH Door Lock Assembly
FRH Door Lock (Switch)	BCM	40W BK	8							
Rear Screen Heater HB	IC82	16W BK	1	814	4	813	2	10W BK	6415	FRH View Mirror Heater
Rear Screen Heater Relay	RB00B	10W WI	B5							
FLH View Mirror Heater	IC70	16W BK	4							
Rear Screen Heater SD	8120B	1W BK	1							
Rear Screen Heater Switch	IC23A	16W BK	9							
Radio (Crouse)	8410B	8W WI	4	8431	5	8431	2	2W BK	8425	FRH Door Speaker
Radio (RDE)	8410A	8W BK	4	8431						
Outside Temperature Sensor	IC23A	16W BK	13	720	6	720	3	10W BK	6415	FRH View Mirror
Ground		EC22								
RRH Door Lock Assembly Ground	IC73	14W BK	7	E720	7	E720	4	10W BK	6415	FRH View Mirror Gound
FRH Door Lock Assembly Ground	IC71	16W BK	10							
Radio Ground	8410E	8W BK	9							
RLH Window Lift Switch Ground	6100	7W GN	B3							
RLH Window Lift Switch Ground	6100	7W GN	A4							
RRH Window Lift Switch Ground	6105	8W BK	A1							
RRH Window Lift Switch Ground	6105	8W BK	A4							
RRH Window Lift Switch Ground	6105	8W BK	B3							
RLH Window Lift Switch Ground	6100	7W GN	A1							
Cigar Lighter Lamp Ground	3053	2W YL	2							
Cigar Lighter Ground	8100	3W BK	3							
Front Window Lift And Mirror Switch	6036P	7W BK	B2	6061	8	6061	2	2W GR	6045	FRH Window Winder Motor
Not Used										
Ground		EC22			9					Not Used
RRH Door Lock Assembly Ground	IC73	14W BK	7	EC22P	10	E22A	2	6W BR	6207	FRH Door Lock Assembly Ground
FRH Door Lock Assembly Ground	IC71	16W BK	7							
Radio Ground	8410E	8W BK	9							
RLH Window Lift Switch Ground	6100	7W GN	B3							
RLH Window Lift Switch Ground	6100	7W GN	A4							
RRH Window Lift Switch Ground	6105	8W BK	A1							
RRH Window Lift Switch Ground	6105	8W BK	A4							
RRH Window Lift Switch Ground	6105	8W BK	B3							
RLH Window Lift Switch Ground	6100	7W GN	A1							
Cigar Lighter Lamp Ground	3053	2W YL	2							
Cigar Lighter Ground	8100	3W BK	3							
Front Window Lift and Mirros Switch	6036C	18W BK	4	6411	11	6411	5	10W BK	6415	FRH View Mirror
Front Window Lift and Mirros Switch	6036C	18W BK	2	6412						
Radio (Crouse)	8410B	8W WI	3	8430	13	8430	1	2W BK	8425	FRH Door Speaker
Radio (RDE)	8410A	8W BK	3	8430						
FRH Door Lock (Switch)	BCM	40W BK	10	6217	14	6217	1	6W BR	6207	FRH Door Lock Assembly(Switch)
Door Lock	BCM	15W WI	B3							
FLH Door Lock Assembly	IC70	16W BK	15	6202	15	620	3	6W BR	6207	FRH Door Lock Assembly(Switch)
RLH Door Lock Assembly	IC72	14W BK	5							
RRH door lock Assembly	IC73	14W BK	5							
Boot Lock Motor Only For HB	IC82	16W BK	5							
Front Window Lift and Mirros Switch	6036C	18W BK	14							
Front Window Lift and Mirros Switch	6036C	18W BK	14	6410	16	6410	6	10W BK	6415	FRH View Mirror

Drawn by: Engineering Dep. of ISACO

2014/10/11

Interconnector – P6L ECO MUX

1501006

Interior					IC72 14w BK	Rear Door LH				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Radio (Crouse)	8410B	8W WI	7	8450A	1	8470	1	2W BK	8430	RLH Door Speaker
Radio (HB And SD) Radio (RDE)	8410A	8W BK	7	8450A						
Radio (Rear Speaker) (SD)	8430A	2W BK	1	8450B						
Radio (HB And SD) Radio (Crouse)	8410B	8W WI	8	8451A	2	8471	2	2W BK	8430	RLH Door Speaker
Radio (HB And SD) Radio (RDE)	8410A	8W BK	8	8451A						
Radio (Rear Speaker) (SD)	8430A	2W BK	2	8451B						
Not Used					3					Not Used
Not Used					4					Not Used
Door Lock	BCM	15W WI	B3	6203	5	620	5	5W BR	6212	RLH Door Lock Assembly
FRH Door Lock Assembly	IC71	16W BK	15							
FLH Door Lock Assembly	IC70	16W BK	15							
RRH door lock Assembly	IC73	14W BK	5							
Boot Lock Motor Only For HB	IC82	16W BK	5							
Not Used					6					Not Used
FLH Door Lock Assembly Ground	IC70	16W BK	10	E220	7	MC20S	3	5W BR	6212	RLH Door Lock Assembly Ground
Gruond		EC23								
Roof Lamp Gruond	3010	4W GN	2							
BCM Ground	BCM	40W BK	4							
Heater Blower Relay Gruond	R800B	10W WI	A2							
BCM Ground	BCM	15W WI	B1							
Seat Belt Switch Gruond	4730	2W WI	1							
Hand Brake Switch Gruond	4400	2W BR	2							
Front Wash Pump Ground (SD)	IC23B	6W BK	5							
RLH Window Lift Switch	6100	7W GN	B4							
RLH Window Lift Switch	6100	7W GN	B1	6121	9	6171	1	2W GY	6130	RLH Window Winder Mototr
Not Used					10					Not Used
Not Used					11					Not Used
Doors Unlock	BCM	15W WI	B2	6213	12	6211	4	5W BR	6212	RLH Door Lock Assembly
FRH Door Lock Assembly	IC71	16W BK	2							
FLH Door Lock Assembly	IC70	16W BK	2							
RRH door Lock assembly	IC73	14W BK	12							
Boot Lock Motor (HB)	IC82	16W BK	6							
Boot Lock Motor (SD)	6260	2W WI	1							
Not Used										
RLH Door Switch Input	BCM	40W BK	20	6288	14	6287	1	5W BR	6212	RLH Door Lock Assembly

Interconnector – P6L ECO MUX

1501006

Interior					IC73 14w BK	Rear Door RH				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Radio (HB And SD) Radio (Crouse)	8410B	8W WI	1	8470A	1	8470	1	2W BK	8435	RRH Door Speaker
Radio (HB And SD) Radio (RDE)	8410A	8W BK	1	8470A						
Radio (Rear Speaker) (SD)	8435A	2W BK	1	8470B						
Radio (HB And SD) Radio (Crouse)	8410B	8W WI	2	8471A	2	8471	2	2W BK	8435	RRH Door Speaker
Radio (HB And SD) Radio (RDE)	8410A	8W BK	2	8471A						
Radio (Rear Speaker) (SD)	8435A	2W BK	2	8471B						
Not Used					3					Not Used
Not Used					4					Not Used
Door Lock	BCM	15W WI	B3	6204	5	620	5	5W BR	6217	RRH Door Lock Assembly
FRH Door Lock Assembly	IC71	16W BK	15							
FLH Door Lock Assembly	IC70	16W BK	15							
RLH door lock Assembly	IC72	14W BK	5							
Boot Lock Motor Only For HB	IC82	16W BK	5							
Not Used					6					Not Used
Gruond		EC22		E221	7	MC20S	3	5W BR	6217	RRH Door Lock Assembly Ground
FRH Door Lock Assembly Ground	IC71	16W BK	7							
FRH Door Lock Assembly Ground	IC71	16W BK	10							
Radio Ground	8410E	8W BK	9							
RLH Window Lift Switch Gruond	6100	7W GN	B3							
RLH Window Lift Switch Gruond	6100	7W GN	A4							
RRH Window Lift Switch Gruond	6105	8W BK	A1							
RRH Window Lift Switch Gruond	6105	8W BK	A4							
RRH Window Lift Switch Gruond	6105	8W BK	B3							
RLH Window Lift Switch Gruond	6100	7W GN	A1							
Cigar Lighter Lamp Ground	3053	2W YL	2							
Cigar Lighter Ground	8100	3W BK	3							
RRH Window Lift Switch	6105	8W BK	B4							
RRH Window Lift Switch	6105	8W BK	B1	6171	9	6171	1	2W GY	6135	RRH Window Winder Mototr
Not Used					10					Not Used
Not Used					11					Not Used
Doors Unlock	BCM	15W WI	B2	6214	12	6211	4	5W BR	6217	RRH Door Lock Assembly
FRH Door Lock Assembly	IC71	16W BK	2							
FLH Door Lock Assembly	IC70	16W BK	2							
RLH door Lock assembly	IC72	14W BK	12							
Boot Lock Motor (HB)	IC82	16W BK	6							
Boot Lock Motor (SD)	6260	2W WI	1							
Not Used										
RRH Door Switch Input	BCM	40W BK	19	6287	14	6287	1	5W BR	6217	RRH Door Lock Assembly

Interconnector – P6L ECO MUX

1501006

Interior					IC77 2w GN	Passenger Airbag					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Only For Vehicle With Passenger Airbag	6750	50W BU	18	6510	1	6510	1	2W BK	6564	Passenger Airbag module	
Only For Vehicle With Passenger Airbag	6750	50W BU	19	6511	2	6511	2	2W BK	6564	Passenger Airbag module	

Rear Bumper					IC80 6w BK	Interior ((With Rear Sensor Vehicle))					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
RH Reverse Sensor Ground	7512	4W BK	4	E021	1	E80	EC21			Ground	
LH Reverse Sensor Ground	7510	4W BK	4				3	6W BK	2635	RH Rear Lamp Ground	
Rear Fog Lamp Ground	2011	2W GY	1				4	6W BK	2630	LH Rear Lamp Ground (HB)	
Rear Fog Lamp	2011	2W GY	2	202	2	202	A6	15W WI	BCM	Rear Fog Lamp	
Reverse Sensor (Lin Network)	7510	4W BK	1	L750	3	L750	32	40W BK	BCM	Reverse Sensor (Lin Network)	
RH Reverse Sensor	7512	4W BK	2	V600	4	V600	11	16W BK	IC23A	V ECO	
LH Reverse Sensor	7510	4W BK	2				A5	15W WI	BCM	V ECO	
							3	4W GN	3010	V ECO For Roof Lamp	
							1	9W YL	6120	V ECO For Isolator Switch	
							1	2W WI	3105	V ECO Boot Lamp	
Not Used					5		A1	10W BK	RB00C	V ECO For Front Window lift Switch Relay	
Not Used					6					Not Used	

Interconnector – P6L ECO MUX

1501006

Interior ((Only HB))					IC82 16w BK	Tailgate					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
FLH View Mirror Heater	IC70	16W BK	4	811	1	811	1	1W BK	8120B	Rear Screen Heater (HB)	
Rear Screen Heater Relay	RB00B	10W WI	B5								
FRH View Mirror Heater	IC71	16W BK	4								
Rear Screen Heater Switch	IC23A	16W BK	9								
Brake Pedal Switch	IC23C	16W BK	10	211	2	214	1	3W BK	2110	Additional Stop Lamp	
Cigar Lighter Lamp	3053	2W YL	1	V094	3	V1806	1	2W BK	2636	Number Plate Lamp	
Isolator Switch Backlight	6120	9W YL	4								
Side Lamp	IC23C	16W BK	2								
Side Lamp	BCM	15W WI	A7								
Radio Backlight	8410B	12W WI	5								
Cigar Lighter	8100	3W BK	1								
Rear RH Side Lamp	2635	6W BK	1								
Rear LH Side Lamp	2630	6W BK	5								
Trunk Lid Lamp (Only For Vehicle Without Rear Screen Heater)	3105	2W WI	2	312	4	319	1A	2W BK	3100	Contact Switch For Trunk	
Trunk Lid Switch (Only For Vehicle Without Rear Screen Heater)	BCM	40W BK	5	6205	5	6206	1	2W WI	6260	Boot Lock Motor	
Door Lock	BCM	15W WI	B3								
FRH Door Lock Assembly	IC71	16W BK	15								
RLH Door Lock Assembly	IC72	14W BK	5								
RRH door lock Assembly	IC73	14W BK	5	6215	6	6216	2	2W WI	6260	Boot Lock Motor	
FRH Door Lock Assembly	IC70	16W BK	15								
Doors Unlock	BCM	15W WI	B2								
FRH Door Lock Assembly	IC71	16W BK	2								
RLH Door Lock Assembly	IC72	14W BK	12								
RRH door Lock assembly	IC73	14W BK	12								
FLH Door Lock Assembly	IC70	16W BK	2	521	9	521	1	3W WI	5215	Rear Wiper	
Not Used											
Not Used					8						Not Used
Rear Wiper Relay	RB00D	10W GY	A3	521	10	522	2	3W WI	5215	Rear Wiper	
Rear Wiper Zero Position	BCM	40W BK	13	522A	11					Not Used	
Not Used					12					Not Used	
Not Used					13					Not Used	
Not Used					14					Not Used	
Not Used					15					Not Used	
Not Used					16					Not Used	

Drawn by: Engineering Dep. of ISACO

2014/10/11