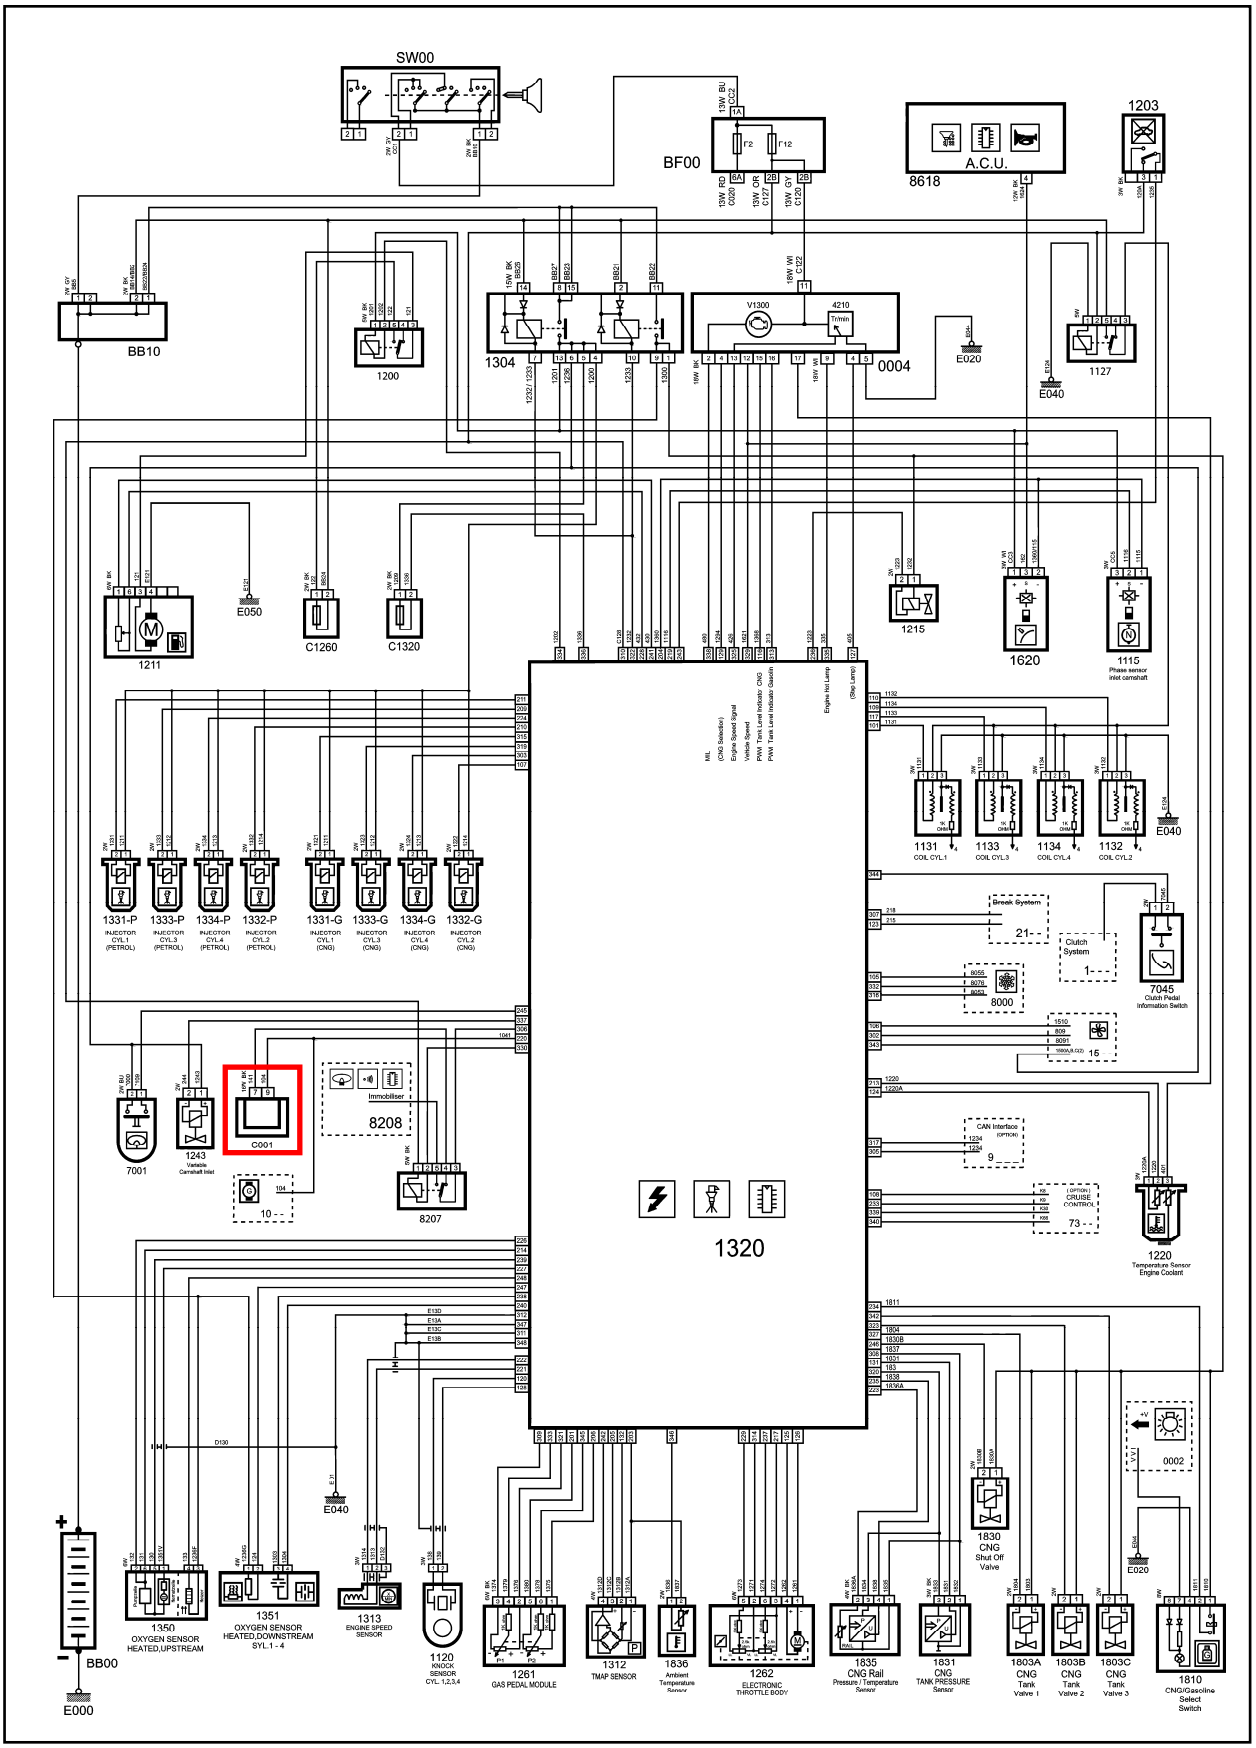
SW00
BF00
A.C.U.
8618
1203
BB10
1200
1304
V1300
4210
0004
E020
E040
1127
E050
1211
C1260
C1320
1215
1620
1115
Phase sensor inlet camshaft
1320
1131
COIL CYL.1
1133
COIL CYL.3
1134
COIL CYL.4
1132
COIL CYL.2
1331-P
INJECTOR CYL.1 (PETROL)
1333-P
INJECTOR CYL.3 (PETROL)
1334-P
INJECTOR CYL.4 (PETROL)
1332-P
INJECTOR CYL.2 (PETROL)
1331-G
INJECTOR CYL.1 (CNG)
1333-G
INJECTOR CYL.3 (CNG)
1334-G
INJECTOR CYL.4 (CNG)
1332-G
INJECTOR CYL.2 (CNG)
Break System
Clutch System
7045
Clutch Pedal Information Switch
8000
CAN Interface
CRUISE CONTROL
1220
Temperature Sensor Engine Coolant
7001
1243
Variable Camshaft Inlet
C001
Immobiliser
8208
8207
0002
1830
CNG Shut Off Valve
1350
OXYGEN SENSOR HEATED,UPSTREAM
1351
OXYGEN SENSOR HEATED,DOWNSTREAM SYL.1 - 4
1313
ENGINE SPEED SENSOR
1120
KNOCK SENSOR CYL. 1,2,3,4
1261
GAS PEDAL MODULE
1312
TMAP SENSOR
1636
Ambient Temperature Sensor
1262
ELECTRONIC THROTTLE BODY
1835
CNG Rail Pressure / Temperature Sensor
1831
CNG TANK PRESSURE Sensor
1803A
CNG Tank Valve 1
1803B
CNG Tank Valve 2
1803C
CNG Tank Valve 3
1810
CNG/Gasoline Select Switch
BB00
E000